

# TECHNICAL DATA

SINGLE DIRECTION VIBRATORY PLATES

BP 10/30



#### **Compact**

Guide handle without tool folding - fits in any car boot




#### **Plug and Play retrofit kits**

Assembly in no time at all - machine can be individually customised

**Shipping dimensions in m3**

**BP 10/30**

0,087

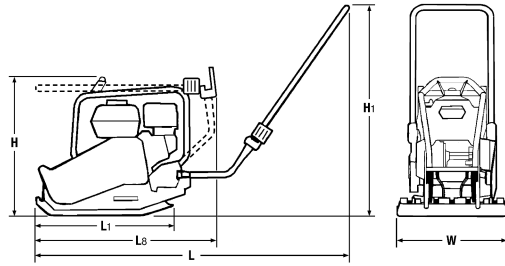

**Standard Equipment**

- Vibration insulated steering handle, foldable
- Detachable steering handle
- Hand-arm vibrations <5m/s<sup>2</sup>
- Automatic shutdown at low oil level
- Highly wear resistant base plate
- Recoil starter
- Fully protected V-belt
- Carrying handles
- Single point lifting device
- 3-2-1 Warranty

**Optional Equipment**

- Sprinkler system (5l)
- Spraying system, base plate (320mm)
- Transport wheels
- Vulcolan mat
- Hour meter
- Special painting
- Service Kit
- Tool kit

**Dimensions in mm**

	H	H1	L	L1	L8	W
<b>BP 10/30</b>	445	445	1066	529	608	320

**Technical Data**

**BOMAG  
BP 10/30**

**Weights**

Operating weight CECE .....	kg	53
Basic weight .....	kg	53

**Dimensions**

Working width .....	mm	320
---------------------	----	-----

**Driving Characteristics**

Working speed, max. ....	m/min	25
Max. gradeability (dep. on soil con.) .....	%	30

**Drive**

Engine manufacturer .....	Briggs&Stratton
Engine type .....	XR550
Emission stage .....	Stage V / CARB P.3
Cooling .....	air
Number of cylinders .....	1
Performance SAE J 1349 .....	kW 2,6
Speed .....	min-1 3.600
Drive system .....	mech.
Fuel .....	Gasoline
Fuel consump. aver. during operation .....	l/h 1,1

**Exciter system**

Frequency .....	Hz	100
Centrifugal force .....	kN	10
Amplitude .....	mm	1,23

**Capacities**

Fuel .....	l	2,0
------------	---	-----

Technical modifications reserved. Machines may be shown with options.



PRE 630 01 010

120625 Sa

**BOMAG**  
Hellerwald  
D-56154 Boppard  
P.O. Box 5162  
Tel. (0)6742 - 1000  
Fax (0)6742 - 3090

